
Sigma CP K and Sigma CP T series

Fire Control Panel

User Manual



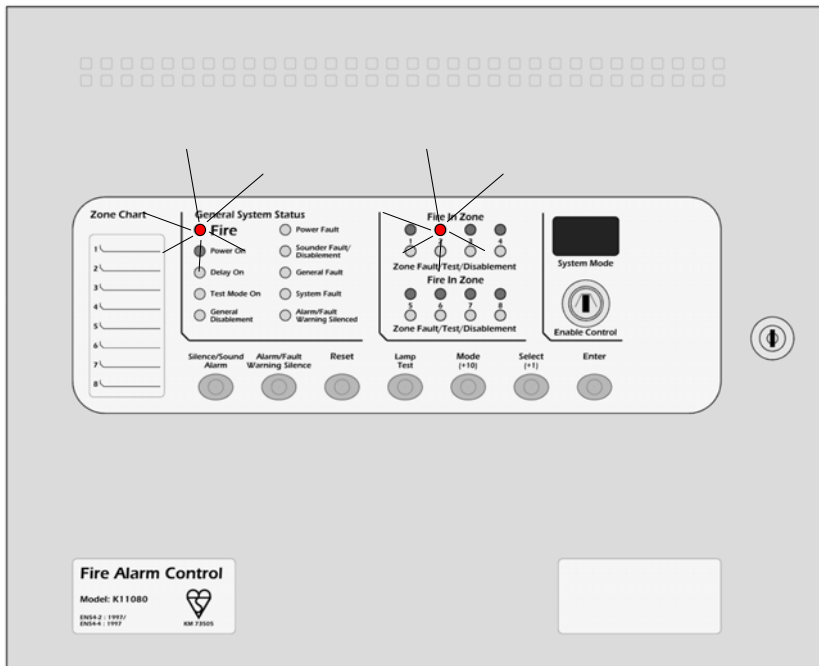
DOCUMENT REFERENCE K6800-08 (Man-1082)

MODEL NUMBERS
K11020M2, K11040M2, K11080M2
T11020M2, T11040M2, T11080M2

Issue 02 July 2005

Fire alarm condition

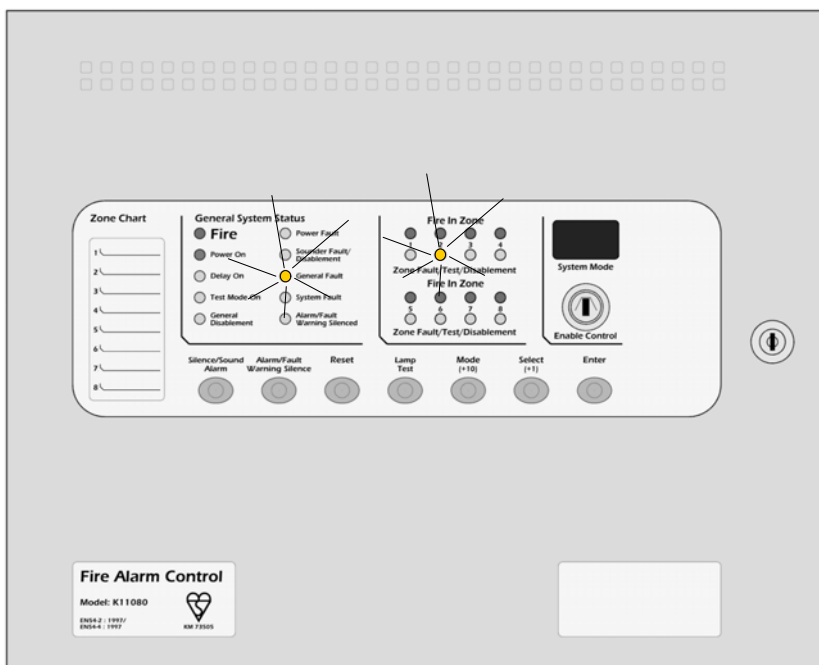
General fire indicator lights and zonal fire indicators flash. Buzzer pulses rapidly.



Carry out fire procedure

Fault condition

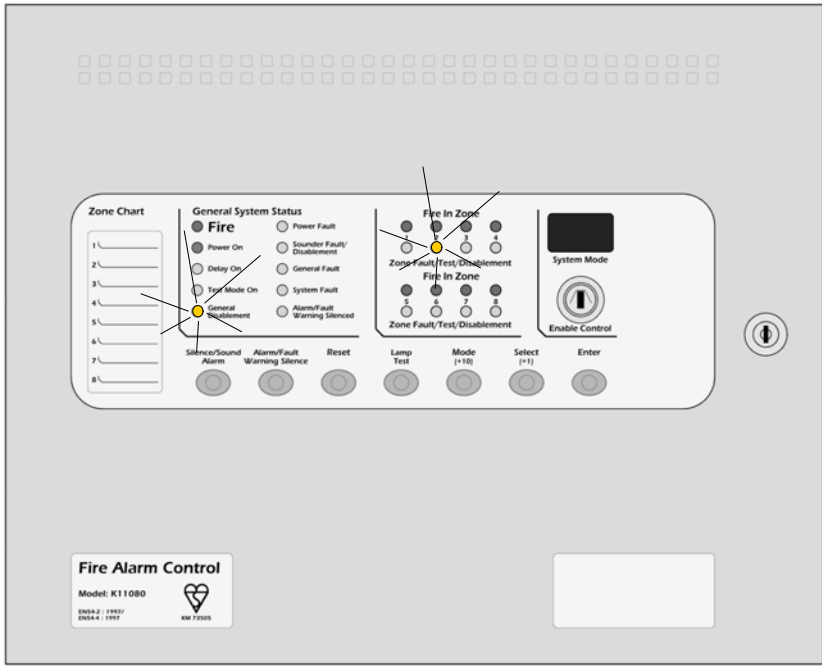
General fault indicator lights and specific fault indicators flash. Buzzer sounds continuously.



Call maintenance engineer

Disabled condition

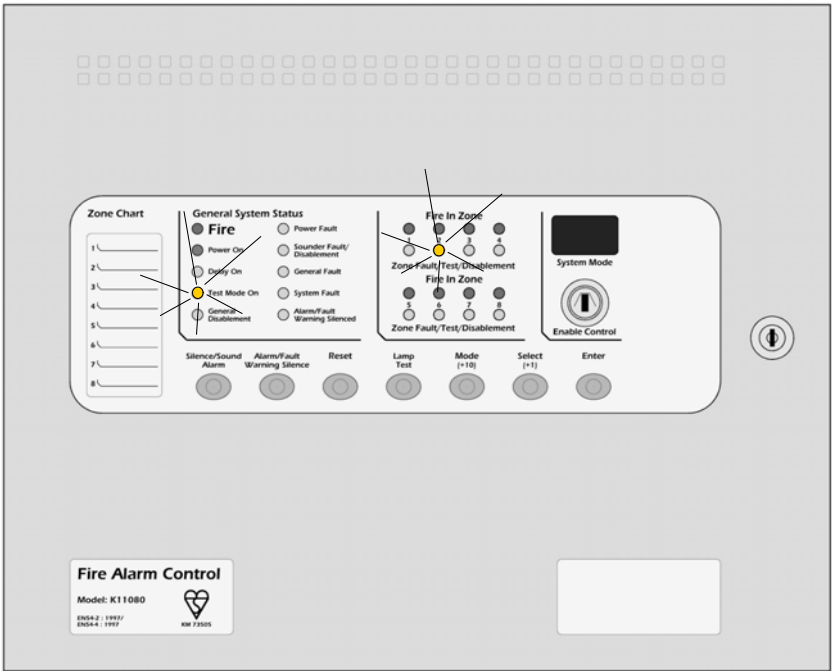
General disablement indicator and specific fault indicator lit continuously.



 

 
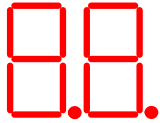
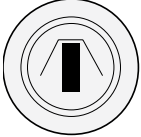
 
 
 
 

 
 

 

 
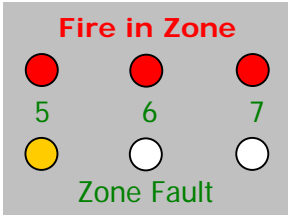
 

Maintain vigilance during disablement conditions

 

 

 
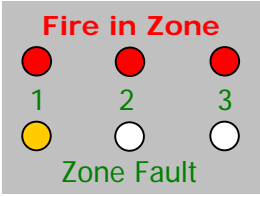


 

 

 
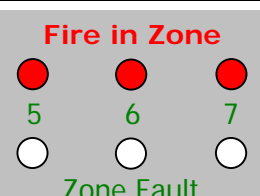

 
 
 

 
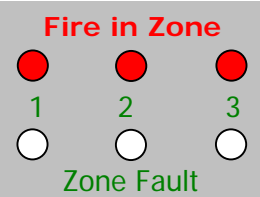

Test condition

 
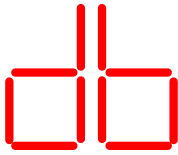
 
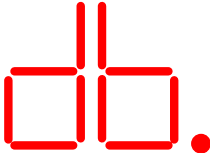
 
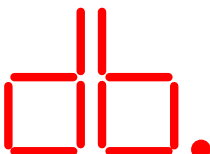
 
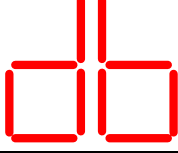
 
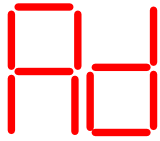
 
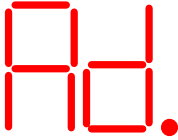
 
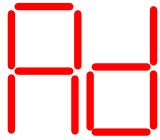
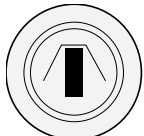
Test indicator and specific fault indicator lit continuously.



Ensure system is returned to normal when testing is finished

How To	Do This	Display	Comments
Silence buzzer	<p>Alarm/Fault Buzzer Silenced</p>  <p>Press button</p>		
Test lamps	<p>Lamp Test</p>  <p>Press button</p>	 <p>All lamps on</p>	Buzzer sounds whilst button is pressed
<p>Enable buttons</p> <p>(Only Alarm/Fault warning Silence and Lamp Test buttons are operable without turning enable key)</p>	<p>Enable Control</p>  <p>Turn key</p>		Buzzer beeps twice every few seconds
Silence alarms	<p>Silence/Sound Alarm</p>  <p>Press button</p>		
Sound alarms	<p>Silence/Sound Alarm</p>  <p>Press button</p>		Buzzer pulses rapidly
Reset	<p>Reset</p>  <p>Press button</p>		Ensure source of fire event is cleared before resetting
Disable a zone step 1	<p>Mode</p>  <p>Press button</p>	 <p>First display</p>	
Disable a zone step 2	<p>Select</p>  <p>Press button to scroll zones</p>	 <p>Zone 5</p>	Zone 5 for example
Disable a zone step 3	<p>Enter</p>  <p>Press button</p>	 <p>Zone 5 fault LED lit</p>	  <p>Dot flashes to indicate disablement</p>

How To	Do This	Display	Comments
Put a zone into test mode step 1	<p>Mode</p>  Press button	 First display	
Put a zone into test mode step 2	<p>Select</p>  Press button to scroll zone	 Zone 5	Zone 5 for example
Put a zone into test mode step 3	<p>Enter</p>  Press button	 Zone 1 fault LED lit	 General Disablement  Dot flashes to indicate test mode
Enable a zone step 1	<p>Mode</p>  Press button to display disablements	 First display	
Enable a zone step 2	<p>Select</p>  Press button to scroll zones	 Zone 5	Flashing dot indicates zone is disabled
Enable a zone step 3	<p>Enter</p>  Press button to enable zone	 Zone 5 LED extinguishes	 General Disablement General disablement indicator extinguishes
Exit test mode step 1	<p>Mode</p>  Press button	 First display	
Exit test mode step 2	<p>Select</p>  Press button to scroll zones	 Zone 5	Flashing dot indicates zone is in test mode
Exit test mode step 3	<p>Enter</p>  Press button to exit test mode	 Zone 1 ft LED extinguishes	 Test Mode On Test mode LED extinguishes

How To	Do This	Display	Comments
Disable sounders step 1	<p>Mode</p>  <p>Press button till db is displayed</p>		
Disable sounders step 2	<p>Enter</p>  <p>Press button</p>		Dot flashes to indicate bells disabled. General disablement and Sounder Fault/Disablement indicators lit
Enable sounders step 1	<p>Mode</p>  <p>Press button till db is displayed</p>		Flashing dot indicates bells disabled.
Enable sounders step 2	<p>Enter</p>  <p>Press button</p>		Dot stops flashing to indicate sounders are enabled
Activate zone input delays step 1	<p>Mode</p>  <p>Press button till Ad is displayed</p>		
Activate zone input delays step 2	<p>Enter</p>  <p>Press button</p>		Dot flashes to indicate that delays are active if they have been set in engineering mode (refer to operation and maintenance manual configuration table)
De-activate zone input delays	<p>Mode</p>  <p>Press button till Ad is displayed</p>		Dot stops flashing to indicate delays have been de-activated
Return system to normal	<p>Enable Control</p>  <p>Turn key and remove</p>		Leaves only Alarm/Fault Warning Silence and Lamp test buttons operable
For service contact:		Telephone:	